

# TROLL PERFECT INSTALLATION INSTRUCTIONS

# Tools and Safety

All you need to install your Troll Perfect is either a 5/16 nut driver, a flat blade screw driver, or a coin.


Absolutely No Disassembly of your trolling motor is required

Safety: ONLY install or adjust Troll Perfect while the motor is in the stowed position, and your boat is stationary.

# Step 1

## Place the first sleeve half


Center the motor bearing inside the Troll Perfect sleeve.

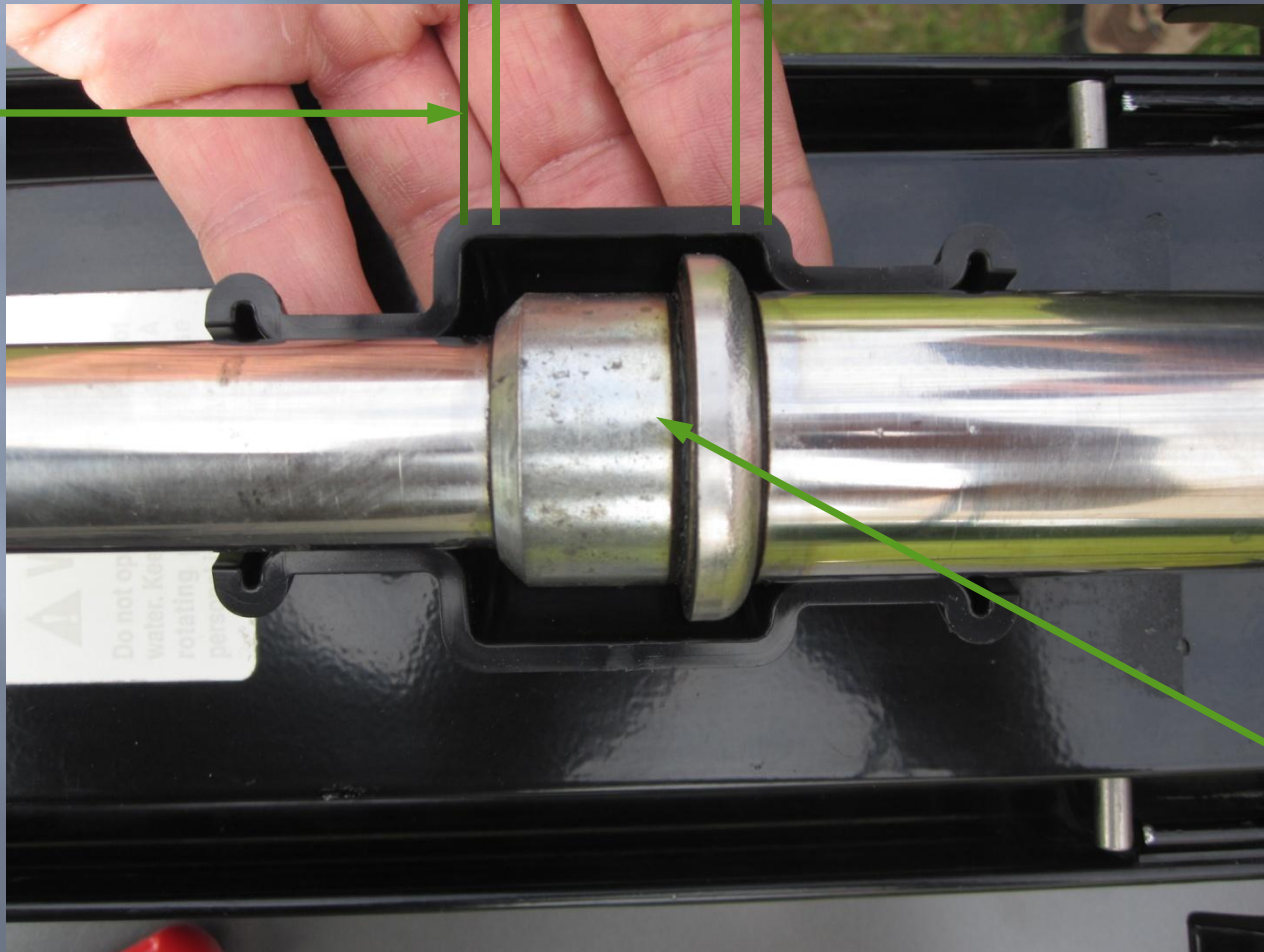

Motor  
Shaft  
Swivel  
Bearing

## Step 2

# Place the second sleeve half

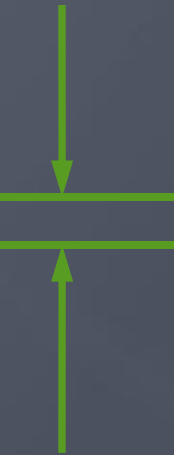

Keep the gap even between the 2 sleeve halves on both sides.

# Step 3

## Install the first clamp



Install the larger clamp in the clamp groove closest to the top of the motor. Tighten the upper clamp completely. A nut driver is shown, but a flat blade screw driver, or coin will also work.

# Step 4

## Install the second clamp

Install the smaller clamp in the clamp groove closest to the bottom of the motor. Only snug this clamp.



# Step 5

## Adjust the tension

Installation of your Troll Perfect is now complete, average total time less than 10 minutes.



You are now ready to adjust the lower (smaller) clamp to the tension you prefer.